

## LIMMAX system variable

1668 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 1045

### Function Description:

The **LIMMAX** system variable is used to store the right-top corner grid limit in current space by world UCS.

**Type** : 2D points

**Saved in** : Drawing

**Initial value** : 12.0000,9.0000 (Imperial) or 420.0000,297.0000 (Metric)

The **LIMMAX** is read only when paper space is active and the paper background or printable area is displayed.

Online URL: <https://www.gstarcad.com.my/knowledge/article/limmax-system-variable-1668.html>