

## **LIMMIN system variable**

1669 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 756

### **Function Description:**

The **LIMMIN** system variable is used to store the left-bottom corner grid limit in current space by world UCS.

**Type** : 2D points

**Saved in** : Drawing

**Initial value** : 0.0000,0.0000

The **LIMMIN** is read only when paper space is active and the paper background or printable area is displayed.

Online URL: <https://www.gstarcad.com.my/knowledge/article/limmin-system-variable-1669.html>