

LOCALE system variable

1671 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 886

Function Description:

The **LOCALE** system variable is used to display the current region code.
(Read-Only)

Type : Strings

Saved in : Not saved

Initial value : Varies by country or region

This code is displayed by three-letter abbreviation.

Online URL: <https://www.gstarcad.com.my/knowledge/article/locale-system-variable-1671.html>