

## **LOCALROOTPREFIX system variable**

1672 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 829

### **Function Description:**

The **LOCALROOTPREFIX** system variable is used to store the full path to the root folder where local customizable files installed.

(Read-Only)

**Type** : Strings

**Saved in** : Registry

**Initial value** : Unknown

Online URL: <https://www.gstarcad.com.my/knowledge/article/localrootprefix-system-variable-1672.html>