

LOCALROOTPREFIX system variable

1672 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 830

Function Description:

The **LOCALROOTPREFIX** system variable is used to store the full path to the root folder where local customizable files installed.

(Read-Only)

Type : Strings

Saved in : Registry

Initial value : Unknown

Online URL: <https://www.gstarcad.com.my/knowledge/article/localrootprefix-system-variable-1672.html>