

LOFTANG1 system variable

1674 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 1037

Function Description:

The **LOFTANG1** system variable is used to set the draft angle through the first cross section in the loft operation.

Type : Real

Saved in : Drawing

Initial value : 90

Range : 0 ~ 360

The 0 direction is measured outward from the curve on the plane of the curve. The positive direction is measured toward the next cross section.

Online URL: <https://www.gstarcad.com.my/knowledge/article/loftang1-system-variable-1674.html>