

## **LOFTANG1 system variable**

1674 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 1024

### **Function Description:**

The **LOFTANG1** system variable is used to set the draft angle through the first cross section in the loft operation.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 90

**Range** : 0 ~ 360

The 0 direction is measured outward from the curve on the plane of the curve. The positive direction is measured toward the next cross section.

Online URL: <https://www.gstarcad.com.my/knowledge/article/loftang1-system-variable-1674.html>