

LOFTMAG1 system variable

1676 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 854

Function Description:

The **LOFTMAG1** system variable is used to set the amplitude of draft angle through the first cross section in the loft operation.

Type : Real

Saved in : Drawing

Initial value : 0.0000

This system variable could control how fast the surface starts bending toward the next cross section

Online URL: <https://www.gstarcad.com.my/knowledge/article/loftmag1-system-variable-1676.html>