

LOFTMAG2 system variable

1677 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 1014

Function Description:

The **LOFTMAG2** system variable is used to set the amplitude of draft angle through the last cross section in the loft operation.

Type : Real

Saved in : Drawing

Initial value : 0.0000

This system variable could control how fast the surface starts bending toward the next cross section.

Online URL: <https://www.gstarcad.com.my/knowledge/article/loftmag2-system-variable-1677.html>