

## **LOFTMAG2 system variable**

1677 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 1011

### **Function Description:**

The **LOFTMAG2** system variable is used to set the amplitude of draft angle through the last cross section in the loft operation.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

This system variable could control how fast the surface starts bending toward the next cross section.

Online URL: <https://www.gstarcad.com.my/knowledge/article/loftmag2-system-variable-1677.html>