

LOFTNORMALS system variable

1678 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 1008

Function Description:

The **LOFTNORMALS** system variable is used to control the normals of a lofted object when it passes through cross sections.

Type : Integer

Saved in : Drawing

Initial value : 6

Range : 0 ~ 6

If specified paths or guide curves, this system variable is ignored.

System Variable Value:

0 : ruled

1 : smooth fit

2 : start cross section

3 : end cross section

4 : start and end cross sections

5 : all cross sections

6 : use draft angle and magnitude

Online URL: <https://www.gstarcad.com.my/knowledge/article/loftnormals-system-variable-1678.html>