

## **LOFTPARAM system variable**

1679 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 869

### **Function Description:**

The **LOFTPARAM** system variable is used to control the shapes for loft solids and surfaces.

**Type** : Bitcode

**Saved in** : Drawing

**Initial value** : 7

**Range** : 0 ~ 15

### **System Variable Value:**

**1** : no twist(minimize the twist between cross sections)

**2** : align direction(align the start and end directions for each section curves)

**4** : simplify(generate simple solids and surface, such as cylinder or planes, rather than spline solids or surfaces )

**8** : close(close the surface or solid between the first and last cross section)

Online URL: <https://www.gstarcad.com.my/knowledge/article/loftparam-system-variable-1679.html>