

LOFTPARAM system variable

1679 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 1028

Function Description:

The **LOFTPARAM** system variable is used to control the shapes for loft solids and surfaces.

Type : Bitcode

Saved in : Drawing

Initial value : 7

Range : 0 ~ 15

System Variable Value:

1 : no twist(minimize the twist between cross sections)

2 : align direction(align the start and end directions for each section curves)

4 : simplify(generate simple solids and surface, such as cylinder or planes, rather than spline solids or surfaces)

8 : close(close the surface or solid between the first and last cross section)

Online URL: <https://www.gstarcad.com.my/knowledge/article/loftparam-system-variable-1679.html>