

LOGFILEMODE system variable

1680 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 1259

Function Description:

The **LOGFILEMODE** system variable is used to control whether to write command history to log files.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0,1

System Variable Value:

0 : do not maintain log files

1 : maintain log files

Online URL: <https://www.gstarcad.com.my/knowledge/article/logfilemode-system-variable-1680.html>