

LOGINNAME system variable

1683 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 974

Function Description:

The **LOGINNAME** system variable is used to display current login users name, and store it together with DWG file and relation documentation properties statistic information.

(Read-Only)

Type : Strings

Saved in : Not saved

Initial value : Unknown

Online URL: <https://www.gstarcad.com.my/knowledge/article/loginname-system-variable-1683.html>