

## **LONGITUDE system variable**

1684 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 751

### **Function Description:**

The **LONGITUDE** system variable is used to specify the longitude of geographic marker.

**Type** : Real

**Saved in** : Drawing

**Initial value** : -122.394

Online URL: <https://www.gstarcad.com.my/knowledge/article/longitude-system-variable-1684.html>