

## **LONGITUDE system variable**

1684 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 759

### **Function Description:**

The **LONGITUDE** system variable is used to specify the longitude of geographic marker.

**Type :** Real

**Saved in :** Drawing

**Initial value :** -122.394

Online URL: <https://www.gstarcad.com.my/knowledge/article/longitude-system-variable-1684.html>