

LONGITUDE system variable

1684 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 746

Function Description:

The **LONGITUDE** system variable is used to specify the longitude of geographic marker.

Type : Real

Saved in : Drawing

Initial value : -122.394

Online URL: <https://www.gstarcad.com.my/knowledge/article/longitude-system-variable-1684.html>