

## **LTSCALE system variable**

1685 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 851

### **Function Description:**

The **LTSCALE** system variable is used to set the global linetype scale factor.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 1

**Range Above** : 0

Online URL: <https://www.gstarcad.com.my/knowledge/article/ltscale-system-variable-1685.html>