

## LUPREC system variable

1687 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 864

### Function Description:

The **LUPREC** system variable is used to set display precious for linear units and coordinates.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 4

**Range** : 0 ~ 8

No matter how to set the display precious, the value for distance, area, and volume and linear coordinate internal precious are always maintained. The **LUPREC** does not have effect on dimension text. The dimension text is controlled by **DIMDEC** system variable and saved together with dimension styles.

Online URL: <https://www.gstarcad.com.my/knowledge/article/luprec-system-variable-1687.html>