

LWDISPLAY system variable

1689 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 808

Function Description:

The **LWDISPLAY** system variable is used to control whether to display object lineweight.

Type : Parameter

Saved in : Drawing

Initial value : off

System Variable Value:

off : do not display lineweight

on : do not display lineweight

Online URL: <https://www.gstarcad.com.my/knowledge/article/lwdisplay-system-variable-1689.html>