

## **LWDISPLAY system variable**

1689 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 822

### **Function Description:**

The **LWDISPLAY** system variable is used to control whether to display object lineweight.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : off

### **System Variable Value:**

**off** : do not display lineweight

**on** : do not display lineweight

Online URL: <https://www.gstarcad.com.my/knowledge/article/lwdisplay-system-variable-1689.html>