

## **LWUNITS system variable**

1690 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 681

### **Function Description:**

The **LWUNITS** system variable is used to control to display lineweight by inches or millimeters.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : inches

**1** : millimeters

Online URL: <https://www.gstarcad.com.my/knowledge/article/lwunits-system-variable-1690.html>