

MAGFADE system variable

1692 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 596

Function Description:

The **MAGFADE** system variable is used to control the transparency of magnifier.

Type : Integer

Saved in : Users-settings

Initial value : 30

Range : 1-100

Online URL: <https://www.gstarcad.com.my/knowledge/article/magfade-system-variable-1692.html>