

MAGMODE system variable

1694 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 667

Function Description:

The **MAGMODE** system variable is used to specify the zoom factor of magnifier.

Type : Integer

Saved in : Users-settings

Initial value : 4

Range : 0,2,4,6

0 : Style:Region Shape:Squire

2 : Style:Window Shape:Squire

4 : Style:Region Shape:Circle

6 : Style:Window Shape:Circle

Online URL: <https://www.gstarcad.com.my/knowledge/article/magmode-system-variable-1694.html>