

MATSTATE system variable

1696 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 777

Function Description:

The **MATSTATE** system variable is used to specify whether the material editor is turned on or off.
(Read-Only)

Type : Integer

Saved in : Drawing

Initial value : 1

Range : 0,1

System Variable Value:

0 : off

1 : on

Online URL: <https://www.gstarcad.com.my/knowledge/article/matstate-system-variable-1696.html>