

## **MATSTATE system variable**

1696 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 729

### **Function Description:**

The **MATSTATE** system variable is used to specify whether the material editor is turned on or off.  
(Read-Only)

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : off

**1** : on

Online URL: <https://www.gstarcad.com.my/knowledge/article/matstate-system-variable-1696.html>