

## **MAXSORT system variable**

1698 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 726

### **Function Description:**

The **MAXSORT** system variable is used to set the maximum number for items, such as file names, layer names, and block names sorted by number order in dialog box, pull down list, and palettes.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1000

**Range** : 0 ~ 32767

If the total number of items(named objects) exceeds this settings, it will not sort any items.

Online URL: <https://www.gstarcad.com.my/knowledge/article/maxsort-system-variable-1698.html>