

MEASUREINIT system variable

1700 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 830

Function Description:

The **MEASUREINIT** system variable is used to control whether a drawing started from scratch using imperial or metric default settings.

Type : Integer

Saved in : Registry

Initial value : Vary by country /region

Range : 0,1

System Variable Value:

0 : imperial

1 : metric

Online URL: <https://www.gstarcad.com.my/knowledge/article/measureinit-system-variable-1700.html>