

MEASUREMENT system variable

1701 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 978

Function Description:

The **MEASUREMENT** system variable is used to control whether the current drawing using imperial or metric hatch pattern and linetype files.

Type : Integer

Saved in : Drawing

Initial value : 0 (Imperial) or 1 (Metric)

Range : 0,1

System Variable Value:

0 : imperial

1 : metric

Online URL: <https://www.gstarcad.com.my/knowledge/article/measurement-system-variable-1701.html>