

## **MENUECHO system variable**

1703 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 1095

### **Function Description:**

The **MENUECHO** system variable is used to set menu echo and prompt control bits.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

**Range** : 0 ~ 15

### **System Variable Value:**

**1** : menu echo disabled

**2** : display menu echo, but do not display system prompts

**4** : disable ^P toggle of menu echoing

**8** : display input/output strings

Online URL: <https://www.gstarcad.com.my/knowledge/article/menuecho-system-variable-1703.html>