

## **MIRRHATCH system variable**

1706 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 827

### **Function Description:**

The **MIRRHATCH** system variable is used to control how MIRROR reflects hatch patterns.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : keep the same direction with hatch pattern

**1** : mirror hatch pattern direction

Online URL: <https://www.gstarcad.com.my/knowledge/article/mirr hatch-system-variable-1706.html>