

MIRRHATCH system variable

1706 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 824

Function Description:

The **MIRRHATCH** system variable is used to control how MIRROR reflects hatch patterns.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1

System Variable Value:

0 : keep the same direction with hatch pattern

1 : mirror hatch pattern direction

Online URL: <https://www.gstarcad.com.my/knowledge/article/mirr hatch-system-variable-1706.html>