

MIRRTEXT system variable

1707 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 671

Function Description:

The **MIRRTEXT** system variable is used to control how **MIRROR** reflects text.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1

System Variable Value:

0 : keep the same direction with text

1 : mirror text direction

Online URL: <https://www.gstarcad.com.my/knowledge/article/mirrtext-system-variable-1707.html>