

MODEMACRO system variable

1708 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 1227

Function Description:

The **MODEMACRO** system variable is used to display text strings in status bar, such as current drawing name, time/data stamp or special modes.

Type : Strings

Saved in : Not saved

Initial value : ""

Online URL: <https://www.gstarcad.com.my/knowledge/article/modemacro-system-variable-1708.html>