

## **MSLTSCALE system variable**

1709 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 792

### **Function Description:**

The **MSLTSCALE** system variable is used to scale the linetype displayed on the model tab by annotation scales.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : do not scale the linetype displayed on the model tab by annotation scales

**1** : scale the linetype displayed on the model tab by annotation scales.

Online URL: <https://www.gstarcad.com.my/knowledge/article/msltscale-system-variable-1709.html>