

MSLTSCALE system variable

1709 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 794

Function Description:

The **MSLTSCALE** system variable is used to scale the linetype displayed on the model tab by annotation scales.

Type : Integer

Saved in : Drawing

Initial value : 1

Range : 0,1

System Variable Value:

0 : do not scale the linetype displayed on the model tab by annotation scales

1 : scale the linetype displayed on the model tab by annotation scales.

Online URL: <https://www.gstarcad.com.my/knowledge/article/msltscale-system-variable-1709.html>