

MTEXTCOLUMN system variable

1710 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 1110

Function Description:

The **MTEXTCOLUMN** system variable is used to set the default column setting for an mtext object.

Type : Integer

Saved in : Drawing

Initial value : 2

Range : 0,1,2

System Variable Value:

0 : without column

1 : adjust the height of dynamic bar automatically

2 : adjust the height of dynamic bar manually

Online URL: <https://www.gstarcad.com.my/knowledge/article/mtextcolumn-system-variable-1710.html>