

MTJIGSTRING system variable

1714 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 912

Function Description:

The **MTJIGSTRING** system variable is used to set the sample text content displayed at cross cursor location when starting MTEXT command.

Type : Strings

Saved in : Registry

Initial value : "abc"

The text string is displayed in the current text size and font. Users could enter any string of up to 10 letters or numbers or enter a period (.) to display no sample text.

Online URL: <https://www.gstarcad.com.my/knowledge/article/mtjigstring-system-variable-1714.html>