

## **NORTHDIRECTION system variable**

1717 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 684

### **Function Description:**

The **NORTHDIRECTION** system variable is used to specify the angle between the Y axis of WCS and north of grid.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

This system variable is not affected by **AUNITS** and **AUPREC**.

Online URL: <https://www.gstarcad.com.my/knowledge/article/northdirection-system-variable-1717.html>