

OBSCUREDLYTYPE system variable

1720 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 932

Function Description:

The **OBSCUREDLYTYPE** system variable is used to specify the linetype of obscured lines.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0 ~ 11

The obscured line is a kind of hidden lines. Users could change its color and linetype to make it visible. The **OBSCUREDLYTYPE** system variable could only be used in 2D viewport. In 3D viewport users should use the **VSOBSCUREDLYTYPE** system variable.

System Variable Value:

0 : off

1 : solid

2 : dashed

3 : dotted

4 : short dash

5 : medium dash

6 : long dash

7 : double short dash

8 : double medium dash

9 : double long dash

10 : medium long dash

11 : sparse dot

Online URL: <https://www.gstarcad.com.my/knowledge/article/obscuredlytype-system-variable-1720.html>