

## **OSDIVIDE system variable**

1722 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 849

### **Function Description:**

The **OSDIVIDE** system variable is used to specify the segments of Divide OSnap.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 3

**Range** : 3-100

Online URL: <https://www.gstarcad.com.my/knowledge/article/osdivide-system-variable-1722.html>