

OFFSETDIST system variable

1723 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 748

Function Description:

The **OFFSETDIST** system variable is used to specify the value of default offset distance.

Type : Real

Saved in : Not saved

Initial value : -1.0000

System Variable Value:

< 0 : offset objects by specifying point

≥ 0 : set default offset distance

Online URL: <https://www.gstarcad.com.my/knowledge/article/offsetdist-system-variable-1723.html>