

OFFSETGAPTYPE system variable

1724 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 702

Function Description:

The **OFFSETGAPTYPE** system variable is used to control how to deal with the potential gap between segments when offsetting polylines.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0,1,2

System Variable Value:

0 : extend segment to projected intersection point

1 : fillet lines at projected intersection point. The radius of each arc segment equal to offset distances.

2 : chamfer lines at projected intersection point. The distance from each chamfer of original object to its vertex equals to offset distance.

Online URL: <https://www.gstarcad.com.my/knowledge/article/offsetgaptype-system-variable-1724.html>