

OLEFRAME system variable

1725 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 858

Function Description:

The **OLEFRAME** system variable is used to control whether to display and plot frames of all OLE objects.

Type : Integer

Saved in : Drawing

Initial value : 2

Range : 0,1,2

It must display OLE object frames to make grips visible.

System Variable Value:

0 : do not display and plot frames

1 : display and plot frames

2 : display but do not plot frames

Online URL: <https://www.gstarcad.com.my/knowledge/article/oleframe-system-variable-1725.html>