

OLEHIDE system variable

1726 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 712

Function Description:

The **OLEHIDE** system variable is used to control whether to display and plot OLE objects.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1,2,3

System Variable Value:

0 : Drawing

1 : Drawing

2 : Drawing

4 : do not display and plot all OLE objects

Online URL: <https://www.gstarcad.com.my/knowledge/article/olehide-system-variable-1726.html>