

## **OLESTARTUP system variable**

1728 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 949

### **Function Description:**

The **OLESTARTUP** system variable is used to control whether the source application of an embedded OLE object loads when plotting.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : do not load OLE source applications

**1** : load OLE source applications when plotting

Online URL: <https://www.gstarcad.com.my/knowledge/article/olestartup-system-variable-1728.html>