

OSNAPZ system variable

1733 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 933

Function Description:

The **OSNAPZ** system variable is used to control whether the object snap automatically project to the plane which is parallel with the XY plane of current elevation in current UCS.

Type : Integer

Saved in : Not saved

Initial value : 0

Range : 0,1

System Variable Value:

0 : the object snap uses specified Z value of point

1 : the object snap uses the set elevation to replace specified Z value of point

Online URL: <https://www.gstarcad.com.my/knowledge/article/osnapz-system-variable-1733.html>