

## **OSNAPZ system variable**

1733 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 935

### **Function Description:**

The **OSNAPZ** system variable is used to control whether the object snap automatically project to the plane which is parallel with the XY plane of current elevation in current UCS.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : the object snap uses specified Z value of point

**1** : the object snap uses the set elevation to replace specified Z value of point

Online URL: <https://www.gstarcad.com.my/knowledge/article/osnapz-system-variable-1733.html>