

PAPERUPDATE system variable

1734 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 845

Function Description:

The **PAPERUPDATE** system variable is used to control the display of warning dialog box when trying to plot layout by a different paper size from default configuration files of plotter.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0,1

System Variable Value:

0 : display warning dialog box if the plotter does not support specified paper size in layout

1 : set the drawing to be the size configured for plotter

Online URL: <https://www.gstarcad.com.my/knowledge/article/paperupdate-system-variable-1734.html>